

ANGEL LINE



 




HIGH CHAIR

DISTRIBUTED BY:
 LONGWOOD FOREST PRODUCTS, INC.
 201 LAKELAND ROAD
 BLACKWOOD, NJ 08012
 CUSTOMER SERVICE: (609) 227-5505

WARNING:

SECURE CHILD IN THE RESTRAINT AT ALL TIMES. NEVER LEAVE CHILD UNATTENDED.


HARDWARE LIST:

  - A.  ... 1 1/2" 2ea
- B.  ... 1 1/2" 8ea
- C.  ... 1 1/2" 10ea
- D.  ... 1/2" 11ea
- E.  2ea


WOOD COMPONENTS:

- 1. Back 1ea
- 2. Arm 2ea
- 3. Seat 1ea
- 4. Rear Arm Spindle 2ea
- 5. Front Leg 2ea
- 6. Rear Leg 2ea
- 7. Foot Rest 1ea
- 8. Top Cross Bar 2ea
- 9. Lower Cross Bar 2ea
- 10. Tray 1ea
- 11. Safety Belt 1ea


Item #613 Jenny Lind

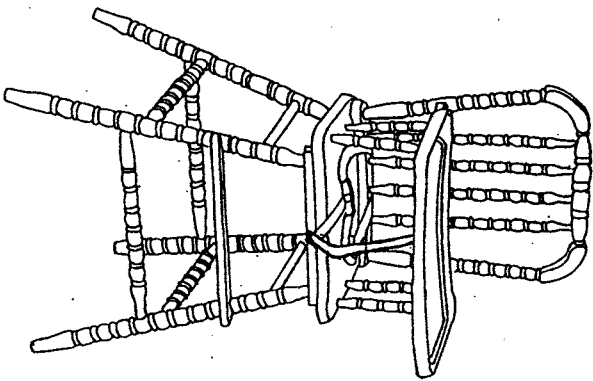


STEP 1 Attach tray arm brackets to arms using screws (D). Attach arms to back with screw (C). Be sure that brackets on arms are to the outside.

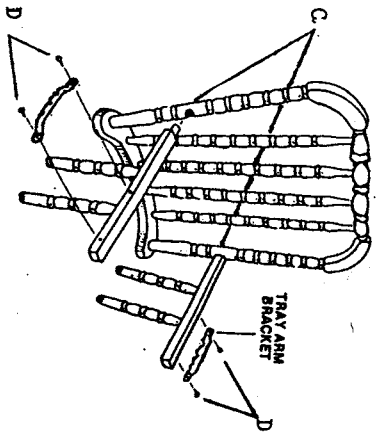


STEP 2 Attach seat with screws (C) in front, bolts (A) at back post, and screws (B) at the middle of back.

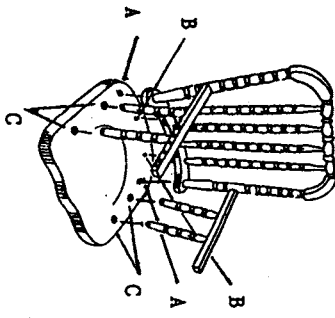


STEP 3 Assembly legs (6 & 7) and cross bars (8 & 9) using screws (C). Attach foot rest with screws (B).

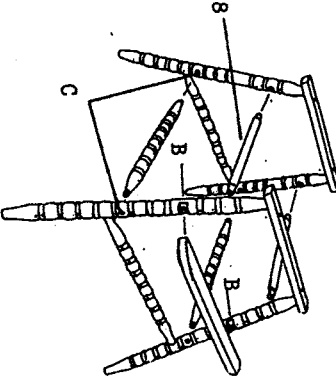


STEP 4 Attach leg assembly to bottom of seat with screws (B).

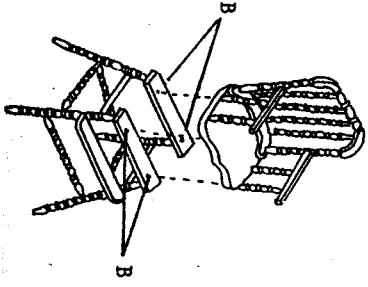


STEP 5 Loosely attach tray brackets to underside of tray with screws (D). To be adjusted and tightened in STEP 6.

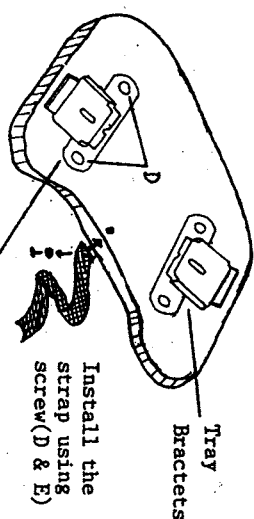

Align TRAY to hi-chair 2 ARMS as shown below (Be sure to adjust TRAY to proper position. Then tighten it before using. Please push 2 ARMS a little inside to get easily sliding in.)

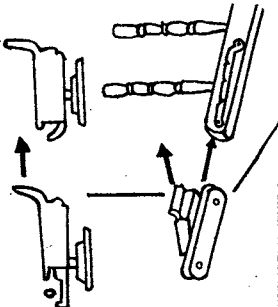

STEP 7 Install the advanced safety restraint belt using screws (D) and washer (E) just under the front lip of the seat. The safety belt goes between the child's legs around the waist, out the back of the chair and around the four spindles.

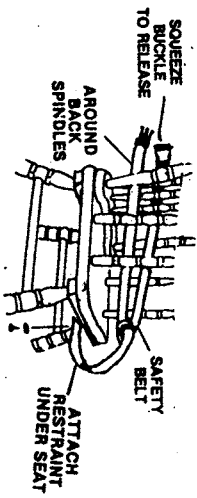

NOTE: THE CHILD SHOULD BE SECURED IN HIGH CHAIR AT ALL TIMES BY THE RESTRAINING SYSTEM. THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE CHAIR.