

CONVERT DROP SIDE RAIL TO STATIONARY



WARNING

Failure to follow these warnings and instructions could result in serious injury or death. Red Safety Clips must be installed when crib in use.

PLASTIC TEETHING RAIL

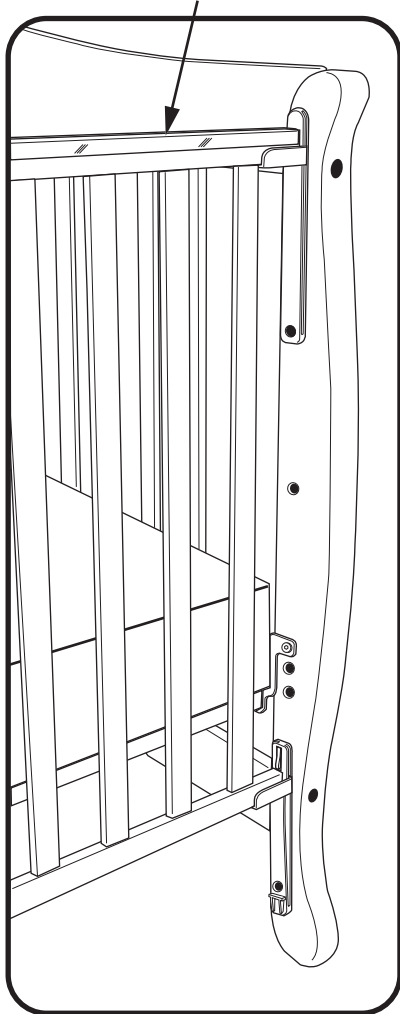


Fig. 1. Right Corner of Crib

Prior to installing the Red Clips, please make sure that the drop side is assembled correctly with the plastic Teething Rail facing up and drop side rail in the raised and locked position. See figure 1.

1. Position right Red Clip (marked "R" on the side of clip) just above bottom T_Rail on the bottom right side of rail. See Figure 2.
2. Slide down right Red Clip until tab clicks into places. See Figure 3.
3. Repeat steps 1 and 2 on left side of crib using the left Red Clip (marked "L" on the side of clip).
4. Push-down and pull-up on rail to verify that the Red Clips are properly and securely in place. If rail does not lock or moves by more than 3/16", please contact customer service number (800-889-8158).

When disassembling crib for storage, remove Red Clips first using a flat screwdriver. Keep Red Clips in safe place for future use.

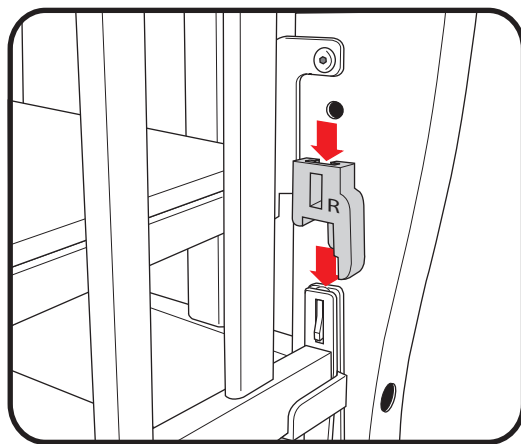


Fig. 2. Position Right Clip

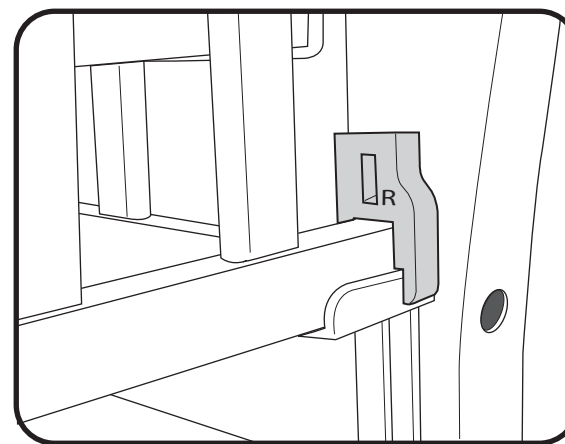


Fig. 3. Slide Down Until Tab Clicks Into Place